


ANGLE HEAD HALF


— 90° Type —

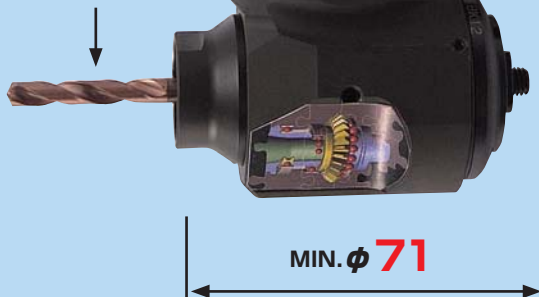

Drill·Endmill
φ1~20
Tap M2~M16



	A	B	C	Chuck range
HFD 7	68	38	71	φ1 ~ φ 7
HFD12	93	58	98	φ2.5~φ13
HFA20	111	64	119	φ5.8~φ20
HFT 4	73	38	74	M2 ~M 8
HFT 6	92	58	97	M3 ~M12
HFT12	115	64	116	M3 ~M16

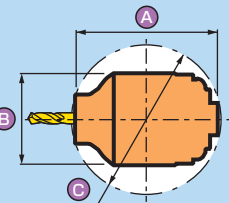


The existing positioning block is available without any modification.

Can be used with all positioning blocks by interchanging the positioning pins.


ANGLE HEAD UNIVERSAL HALF

— Free setting of cutting directions —


Large flange swivel system prevents the intrusion of coolant and cutting chips.

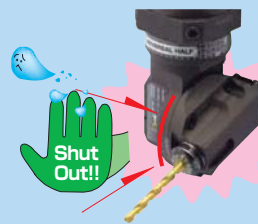

Drill·Endmill
φ1~20
Tap M2~M12

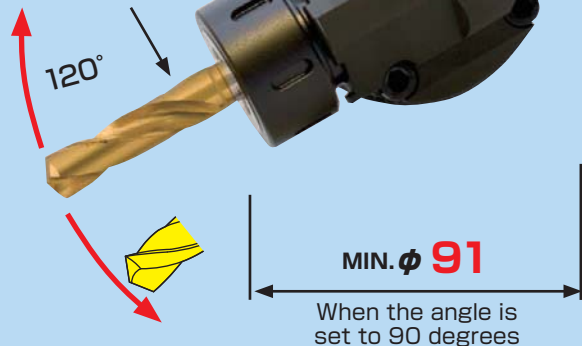


	A	B	Chuck range
HUD 7	80	91	φ1 ~ φ 7
HUA10	101	95	φ2.6~φ10
HUA20	119	136	φ5.8~φ20
HUT 4	89	108	M2 ~M 8
HUT 6	100	119	M3 ~M16

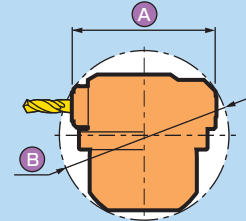

All kinds of positioning blocks can be used by using standard parts and adjustment-type positioning pins

The existing positioning block is available without any modification!

It was necessary to study many machine specifications in order to design and produce precise parts to fit various kinds of positioning block.

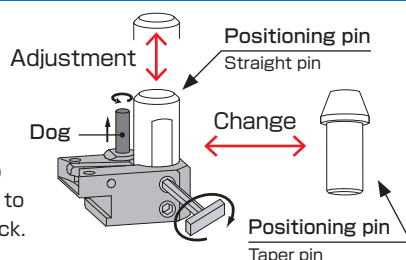

Assembly Kit Kit package

- Ideal as a training kit for learning.
- With only 20 parts, assembly can be completed in only 10 minutes.
- Comes with spare maintenance parts and tools for assembly.
- Easy to assemble – even for first-timers.




INSTALLATION FOR MACHINES

This product can be used with any type of positioning block through a combination of a positioning pin and bracket. Suitable for any kind of positioning block. (MST's Flush holder/Oil hole holder/ Angle head).




Positioning block

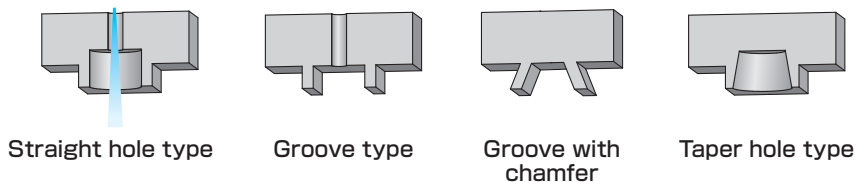

Semi-finished positioning block

For any machine that is not provided with a positioning block, a semi-finished position block is available, which the customer can easily fabricate.

CODE
HB-01

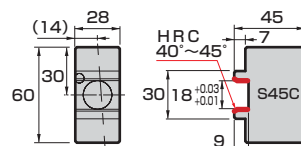


Positioning pin



- Straight hole type
- Groove type

Straight pin (S)

 
- Mainly for drilling and tapping use.
- Coolant can be supplied.



- Straight hole type
- Groove type

Expansion pin (W)

 - The gap between the positioning block and pin has been eliminated to ensure tighter engagement.
- ATC is not applicable.




- Groove with chamfer
- Taper hole type

Taper pin (T)

- The spring force presses the pin into the taper hole.


Adjustable pin height

- The pin can be easily adjusted in length and replaced by simply loosening the bolt.
- Loosening the dog and set screw, and then turning the pin with an Allen wrench allows you to adjust the pin height easily.

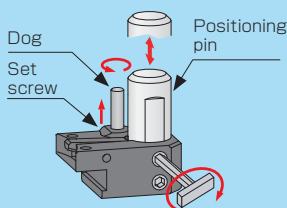

The coolant can be supplied

The coolant can be supplied to the edge of cutter precisely by using the coolant hose, LOC-LINE(LOC6) through straight pin.

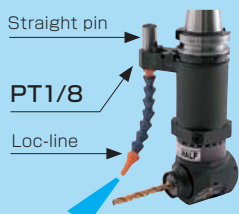

Stationary bracket

Choose a type based on the pitch (dimension P) between the center of the machine spindle and positioning pin.

	CODE	S	Shank type	Holder type
	FKA- 60	60	BT30	HFD 7
	- 65	65	BT40	HFD12
	- 80	80	A 63	HFT 4
	- 85	85	BT50	HFT 6
	- 110	110		HUD 7
	FKB- 60	60	BT40	HFA20
	- 65	65	A 63	HFT12
	- 80	80	BT50	HUA20
	- 85	85		HUT 6
	- 110	110		

Positioning block list for machines

●FANUC LTD.

For ROBODRILL



α-T21iD

Positioning block



CODE
ABF005

●BROTHER INDUSTRIES, LTD.

For TAPPING CENTER



TC-R2A



TC-S2C

Positioning block



CODE	Model
ABF060	TC-S2B / TC-S2C
ABF099	TC-R2A

●YAMAZAKI MAZAK CORP.

For SUPER VELOCITY CENTER



2000L/120
2000L/200

 
Positioning block

※Positioning blocks for the Angle Head are available from Yamazaki Mazak Corp.

DETa-1 collet



See P.11




Spring collet



See P.20



 Tap sleeve



CODE	φD	Collapsibility	Holder type
D 7- 1.5	1 ~ 1.5 (.039"~.059")	0.5	HFD 7 HUD 7
- 2	1.5 ~ 2 (.059"~.079")		
- 2.5	2 ~ 2.5 (.059"~.098")		
- 3	2.5 ~ 3 (.098"~.118")		
- 4	3 ~ 4 (.118"~.157")	1	
- 5	4 ~ 5 (.157"~.197")		
- 6	5 ~ 6 (.197"~.236")		
- 7	6 ~ 7 (.376"~.276")		
D12- 4	2.5 ~ 4 (.098"~.157")	1.5	HFD12
- 6	4 ~ 6 (.157"~.236")	2	
- 8	6 ~ 8 (.236"~.315")		
-10	8 ~ 10 (.315"~.394")		
-12	10 ~ 12 (.394"~.472")		
-13	11 ~ 13 (.433"~.512")		

CODE	φD	Holder type
C10-D	2.6 2.8 3 3.2 3.4 ... (0.2 Steps) ... 9.4 9.6 9.8 10	HUA10
C20-D	6 6.2 6.4 6.6 6.8 ... (0.2 Steps) ... 19.4 19.6 19.8 20	HFA20 HUA20

CODE	φD	Holder type
C10-1/4	6.35 (.25")	HUA10
- 5/16	7.94 (.31")	
- 3/8	9.53 (.38")	

CODE	φD	L	φC	Holder type
TA 4-M 2	M2, M2.6	67.5	16	HFT 4 HUT 4
-M 3	M 3			
-M 4	M 4			
-M 5	M 5			
-M 6	M 6			
-M 8	M 8			
TA 6-M 3	M 3	92	19	HFT 6 HUT 6 HFT12
-M 4	M 4			
-M 5	M 5			
-M 6	M 6			
-M 8	M 8			
-M10	M10			
-M12	M12			
TA12-M14	M14	111.5	25	HFT12
-M16	M16			

※Available for ANSI, DIN and ISO tap sleeve upon request.

Angle head half kit package



Content of kit

CODE	BT40-HF12-LK	Q'ty	BT50-HF12-LK	Q'ty
Master holder	BT40-HFD12-180-S65	1pc.	BT50-HFD12-195-S80	1pc.
Tapping spindle	FR-T6	1pc.	FR-T6	1pc.
Tap sleeve	TA6-3, 4, 5, 6, 8	1pc.	TA6-3, 4, 5, 6, 8	1pc.
DETa-1 Collet	D12-4, 6, 8, 10, 12, 13	1pc.	D12-4, 6, 8, 10, 12, 13	1pc.
Positioning pin	HP-50C	1pc.	HP-62C	1pc.
Spare bearing	7005ADB	1set	7005ADB	1set
	6805	2pcs.	6805	2pcs.
	51106	1pc.	51106	1pc.

Cutting data

●See P.57



CODE SYSTEM


※ Please specify the model no. of angle head and bracket set, when ordering

Master holder			Stationary bracket set		See P.40
Shank	Holder type	Dimension L	Positioning pin type	Dimension S	
BT40	HFA20	135	S	65	



ANGLE HEAD HALF (HFD/HFA/HFT)


HFD7 / HFT4

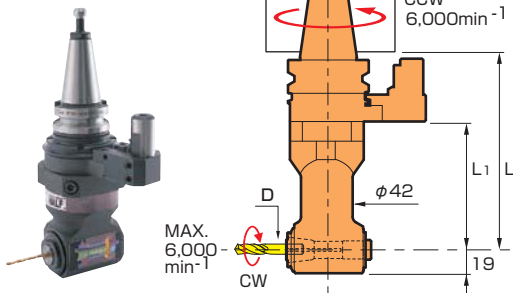

HFD7 For drilling

HFT4 For tapping

HFD12 / HFT6

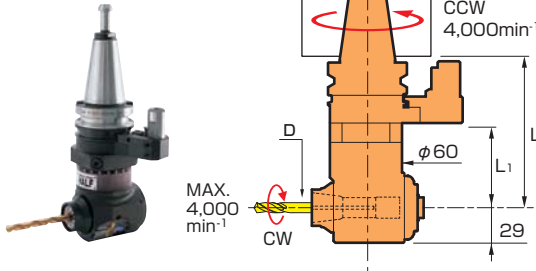


HFD12 For drilling


HFT6 For tapping

CODE	φD	L	L ₁	Kg (lbs)	
BT30 - HFD 7 - 122	1 ~ 7	122	70	2.3	D 7
- 182		182	130	3.0	
- HFD12 - 122	2.5~ 13	122	70	2.9	D 12
- HFT 4 - 122	M2~M 8			2.3	TA 4
- 182		182	130	3.0	
- HFT 6 - 122	M3~M12	122	70	2.9	TA 6
BT40 - HFD 7 - 120	1 ~ 7	120		3.0	D 7
- 180		180	130	3.3	
- HFD12 - 120	2.5~ 13	120	70	3.6	D 12
- 180		180	130	4.9	
BT HFA20 - 135	5.8~ 20	135	77	4.4	C 20
- 195		195	137	5.6	
- HFT 4 - 120	M2~M 8	120	130	3.0	TA 4
- 180		180		3.3	
- HFT 6 - 120	M3~M12	120	70	3.6	TA 6
- 180		180	130	4.9	
- HFT12 - 135	M3~M16	135	77	4.4	TA 6
- 195		195	137	5.6	TA12
BT50 - HFD 7 - 195	1 ~ 7	195	130	6.4	D 7
- 255		255	190	6.8	
- HFD12 - 135	2.5~ 13	135	70	6.3	D 12
- 195		195	130	7.6	
- 255		255	190	8.9	
- HFA20 - 150	5.8~ 20	150	77	7.1	C 20
- 210		210	137	8.3	
- 270		270	197	9.4	
- HFT 4 - 195	M2~M 8	195	130	6.4	TA 4
- 255		255	190	6.8	
- HFT 6 - 135	M3~M12	135	70	6.3	TA 6
- 195		195	130	7.6	
- 255		255	190	8.9	
- HFT12 - 150	M3~M16	150	77	7.1	TA 6
- 210		210	137	8.3	TA12
- 270		270	197	9.4	
A 63 - HFD 7 - 183	1 ~ 7	183	130	3.5	D 7
- 243		243	190	3.9	
- HFD12 - 123	2.5~ 13	123	70	3.3	D 12
- 183		183	130	4.7	
- 243		243	190	6.0	
- HFA20 - 198	5.8~ 20	198	137	5.4	C 20
- 258		258	197	6.5	
HSK - HFT 4 - 183	M2~M 8	183	130	3.5	TA 4
- 243		243	190	3.9	
- HFT 6 - 123	M3~M12	123	70	3.3	TA 6
- 183		183	130	4.7	
- 243		243	190	6.0	
- HFT12 - 198	M3~M16	198	137	5.4	TA 6
- 258		258	197	6.5	TA12

HFA20 / HFT12

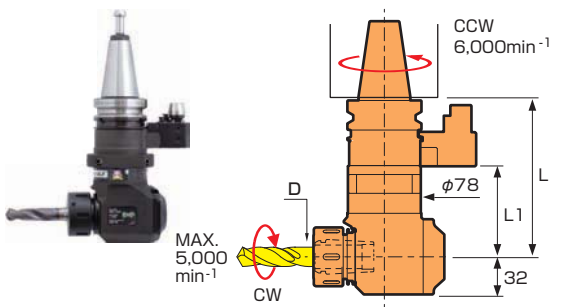

HFA20 For drilling · endmilling **HFT12** For tapping


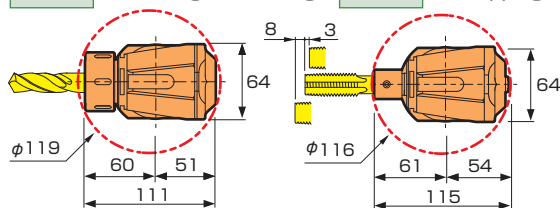


- **Option**
 - DETa-1 Collet (For HFD) • Spring collet (For HFA)
 - Tap sleeve (For HFT) • Retention knob → P.37
 - Spanner KS-22(HFD7, HFT4), KS-30(HFD12, HFT6)
- **Standard Accessories**
 - Coolant duct (HSK-A) • Hexagonal wrench set
 - Spanner(For HFA)
- **Note**
 - Please specify the model no. of angle head and bracket set, when ordering.
 - Other shanks are also available upon request.


CODE	φD	L	L ₁	Kg (lbs)	
DN40A-HFD 7-135	1 ~ 7	135	70	3.1	D 7
-195		195	130	3.4	
-HFD12-135	2.5~ 13	135	70	3.7	D 12
-195		195	130	5.0	
-HFA20-150	5.8~ 20	150	77	4.7	C 20
-210		210	137	5.8	
-HFT 4-135	M2~M 8	135	70	3.1	TA 4
-195		195	130	3.4	
-HFT 6-135	M3~M12	135	70	3.7	TA 6
-195		195	130	5.0	
-HFT12-150	M3~M16	150	77	4.7	TA 6
-210		210	137	5.8	TA12
DN50A-HFD 7-195	1 ~ 7	195	130	5.9	D 7
-255		255	190	6.3	
-HFD12-135	2.5~ 13	135	70	5.8	D 12
-195		195	130	7.1	
-255		255	190	8.4	
-HFA20-150	5.8~ 20	150	77	6.6	C 20
-210		210	137	7.8	
-270		270	197	8.9	
-HFT 4-195	M2~M 8	195	130	5.9	TA 4
-255		255	190	6.3	
-HFT 6-135	M3~M12	135	70	5.8	TA 6
-195		195	130	7.1	
-255		255	190	8.4	
-HFT12-150	M3~M16	150	77	6.6	TA12
-210		210	137	7.8	
-270		270	197	8.9	
CT40 -HFD 7-135	1 ~ 7	135 (5.31")	70 (2.75")	3.1 (6.8)	D 7
-195		195 (7.68")	130 (5.11")	3.4 (7.5)	
-HFD12-135	2.5~ 13	135 (5.31")	70 (2.75")	3.7 (8.2)	D 12
-195		195 (7.68")	130 (5.11")	5.0 (11.0)	
-HFA20-150	5.8~ 20 (.23" ~ .79")	150 (5.91")	77 (3.03")	4.7 (10.4)	C 20
-210		210 (8.27")	137 (5.39")	5.8 (12.9)	
-HFT 4-135	M2~M 8	135 (5.31")	70 (2.75")	3.1 (6.8)	TA 4
-195		195 (7.68")	130 (5.11")	3.4 (7.5)	
-HFT 6-135	M3~M12	135 (5.31")	70 (2.75")	3.7 (8.2)	TA 6
-195		195 (7.68")	130 (5.11")	5.0 (11.0)	
-HFT12-150	M3~M16 (#4" ~ 5/8")	150 (5.91")	77 (3.03")	4.7 (10.4)	TA12
-210		210 (8.27")	137 (5.39")	5.8 (12.9)	
CT50 -HFD 7-195	1 ~ 7	195 (7.68")	130 (5.11")	5.9 (13.0)	D 7
-255		255 (10.04")	190 (7.47")	6.3 (13.8)	
-HFD12-135	2.5~ 13 (.10" ~ .51")	135 (5.31")	70 (2.75")	5.8 (12.8)	D 12
-195		195 (7.68")	130 (5.11")	7.1 (15.6)	
-255		255 (10.04")	190 (7.47")	8.4 (18.5)	
-HFA20-150	5.8~ 20 (.23" ~ .79")	150 (5.91")	77 (3.03")	6.6 (14.7)	C 20
-210		210 (8.27")	137 (5.39")	7.8 (17.3)	
-270		270 (10.63")	197 (7.76")	8.9 (19.8)	
-HFT 4-195	M2~M 8	195 (7.68")	130 (5.11")	5.9 (13.0)	TA 4
-255		255 (10.04")	190 (7.47")	6.3 (13.8)	
-HFT 6-135	M3~M12	135 (5.31")	70 (2.75")	5.8 (12.8)	TA 6
-195		195 (7.68")	137 (5.39")	7.1 (15.6)	
-255		255 (10.04")	190 (7.47")	8.4 (18.5)	
-HFT12-150	M3~M16 (#4" ~ 5/8")	150 (5.91")	77 (3.03")	6.6 (14.7)	TA12
-210		210 (8.27")	137 (5.39")	7.8 (17.3)	
-270		270 (10.63")	197 (7.76")	8.9 (19.8)	

ANGLE HEAD UNIVERSAL HALF (HUD/HUA/HUT)


HUD7 / HUT10 / HUT4

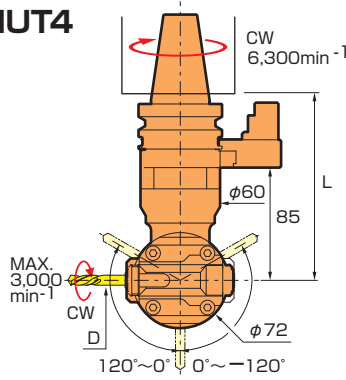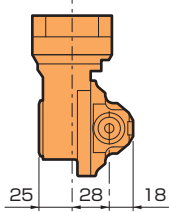


HUD7 For drilling

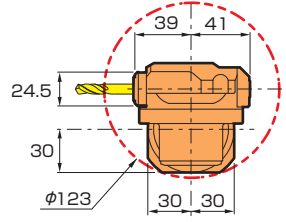


HUA10 For drilling · endmilling

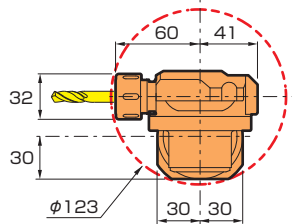


HUT4 For tapping

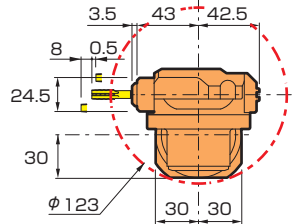


HUA20 / HUT6

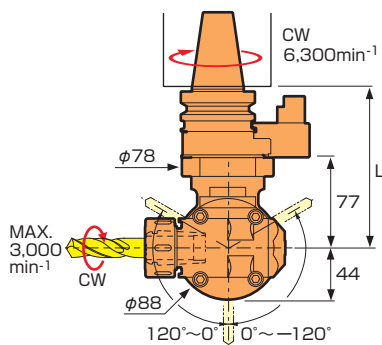

HUA20 For drilling · endmilling

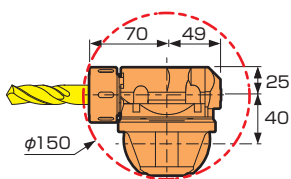

HUT6 For tapping

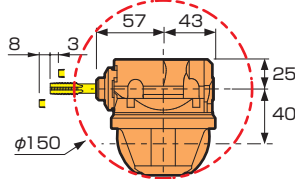

CODE	φD	L	Kg	Moment ※	
BT BT40-HUD 7-135	1.0 ~ 7	135	3.8	251	D 7
-HUA10-135	2.6 ~ 10		3.9	268	C10
-HUA20-135	5.8 ~ 20		4.8	392	C20
-HUT 4-135	M2 ~ M 8		3.8	251	TA4
-HUT 6-135	M3 ~ M12		4.8	392	TA6
BT50-HUD 7-150	1.0 ~ 7	150	6.6	277	D 7
-HUA10-150	2.6 ~ 10		6.7	295	C10
-HUA20-150	5.8 ~ 20		7.5	440	C20
-HUT 4-150	M2 ~ M 8		6.6	277	TA4
-HUT 6-150	M3 ~ M12		7.5	440	TA6
DIN DN40A-HUD 7-150	1 ~ 7	150	3.8	251	D 7
-HUA10-150	2.4~10		3.9	268	C10
-HUA20-150	5.8 ~ 20		5.0	392	C20
-HUT 6-150	M3 ~ M12				TA6
DN50A-HUD 7-150	1 ~ 7	150	6.6	277	D 7
-HUA10-150	2.6~10		6.7	295	C10
-HUA20-150	5.8 ~ 20		7.0	440	C20
-HUT 4-150	M2~M8		6.6	277	T 4
-HUT 6-150	M3 ~ M12		7.0	440	TA6
CAT. CT40 -HUD 7-150	1 ~ 7 (.04" ~ .28")	150 (5.91")	3.8 (8.4)	251	D 7
-HUA10-150	2.4~10 (.09" ~ .39")		3.9 (8.6)	268	C10
-HUA20-150	5.8~20 (.23" ~ .79")		5.0 (11.0)	392	C20
-HUT 4-150	M2~M8		3.8 (8.4)	251	T 4
-HUT 6-150	M3~M16 (#4" ~ 1/2")		5.0 (11.0)	392	TA6
CT50 -HUD 7-150	1 ~ 7 (.04" ~ .28")	150 (5.91")	6.6 (14.6)	277	D 7
-HUA10-150	2.4~10 (.09" ~ .39")		6.7 (14.8)	295	C10
-HUA20-150	5.8~20 (.23" ~ .79")		7.0 (15.4)	440	C20
-HUT 4-150	M2~M8		6.6 (14.6)	277	T 4
-HUT 6-150	M3~M16 (#4" ~ 1/2")		7.0 (15.4)	440	TA6

※Distance from a gage line to center of gravity × weight (kg·mm)

■ Option

- DETA-1 Collet (For HUD) •Spring collet (For HUA)
- Tap sleeve (For HUT) •Retention knob→P.37


■ Standard Accessories

- The tool for assembly
- Spanner (KS-21) •Hexagonal wrench set (W-1550S)
- Spanner (For HUA)

■ Note

- Please specify the model no. of angle head and bracket set, when ordering.
- Other shanks are also available upon request.

HFD7 / HFT4 PARTS LIST

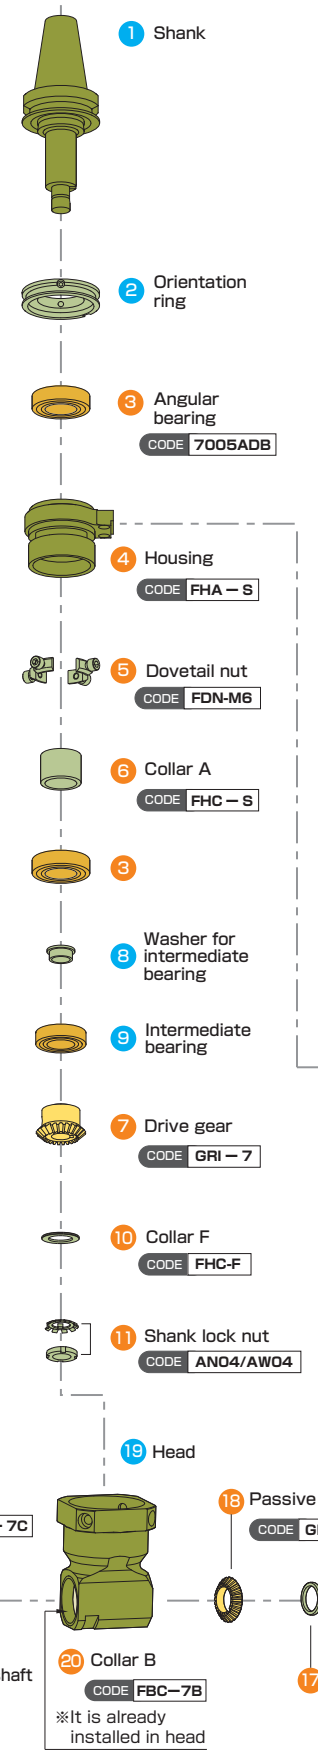	1 Shank	2 Orientation Ring	8 Washer for intermediate bearing		9 Interme- diate bearing	19 Head	26 Positioning pin	27 Bracket
BT30 -HFD7-122	BT30-FSA-7S	ORR-30	—		—	FBA-7S	HP -50A -50B -50C	FKA- 60 - 65
-HFT4-122					6804ZZ	-7L		
-HFD7-182	-7L		FZ-7		—	-7S		
-HFT4-182					6804ZZ	-7L		
BT40 -HFD7-120	BT40-FSA-7S	-40	—				-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HFT4-120						-7XL		
-HFD7-180	-7L		FZ-7					
-HFT4-180								
BT50 -HFD7-195	BT50-FSA-7L		—		6804ZZ	FBA-7L	HP -50A -50B -50C	FKA- 60 - 65
-HFT4-195						-7XL		
-HFD7-255	-7XL						-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HFT4-255								
A63 -HFD7-183	A 63-FSA-7L	ORR-40	FZ-7		6804ZZ	FBA-7L	HP -50A -50B -50C	FKA- 60 - 65
-HFT4-183						-7XL		
-HFD7-243	-7XL							
-HFT4-243								
DN40A-HFD7-135	DN40A-FSA-7S	ORR-40	—		—	FBA-7S	HP -62A -62B -50CL	FKA-60-L -65-L
-HFT4-135					6804ZZ	-7L		
-HFD7-195	-7L		FZ-7				-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HFT4-195						-7XL		
DN50A-HFD7-195	DN50A-FSA-7L		—					
-HFT4-195							-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HFD7-255	-7XL							
-HFT4-255								
CT40 -HFD7-135	CT40-FSA-7S	ORR-40	—		—	FBA-7S	HP -62A -62B -50CL	FKA-60-L -65-L
-HFT4-135					6804ZZ	-7L		
-HFD7-195	-7L		FZ-7				-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HFT4-195						-7XL		
CT50 -HFD7-195	CT50-FSA-7L		—					
-HFT4-195							-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HFD7-255	-7XL							
-HFT4-255								

■ Standard Accessories ●Spanner(KS-22) ●Spanner(13mm)
●Hexagonal wrench set(W-1550S)

The tool for assembly (Option)

Wrench (For shank)



CODE

FC-32

■ Note ●To be used for tightening No.11(Shank Lock Nut).


Wrench (For head)



CODE

TSH-HF7



■ Note ●To be used for tightening No.13(Cover).
No.12(Fixation Nut For Angle Shaft).

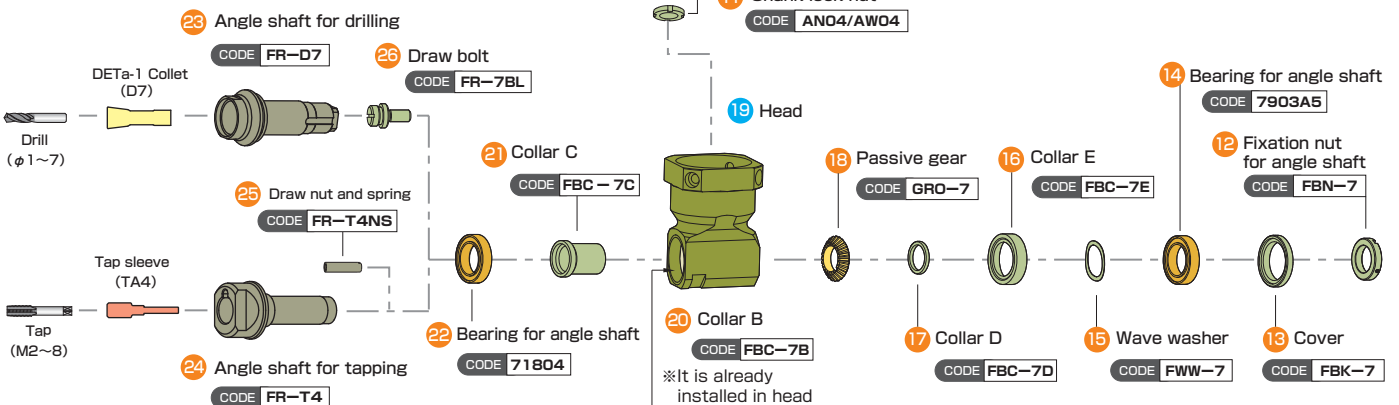

※ 3, 9, 11, 14, 15, 22 are able to use standard commercial items.

※ 25, 26 are the attachments of 23, 24

HFD12 / HFT6 PARTS LIST

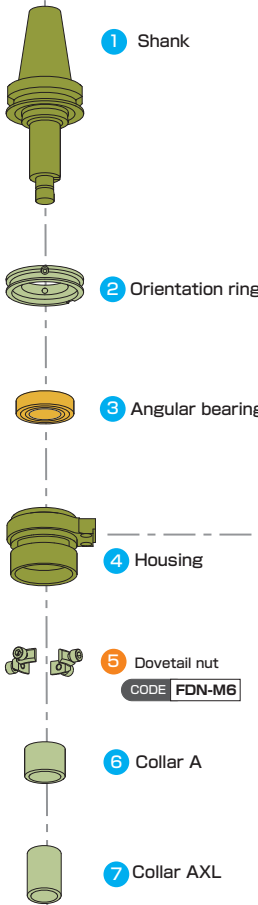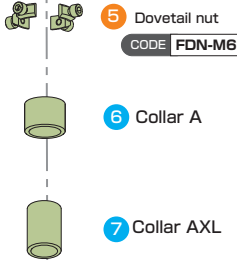	1	2	3	4	6		7	8	25	26	
	Shank	Orientation ring	Angular bearing	Housing	Collar A		Collar AXL	Intermediate bearing	Positioning pin	Bracket	
BT30 -HFD12-122 -HFT 6-122	BT30-FSA-12S	ORR-30	7005ADB	FHA -S	FHC -S		-	-	HP -50A -50B -50C	FKA - 60 - 65	
BT40 -HFD12-120 -HFT 6-120	BT40-FSA-12S	-40									
-HFD12-180 -HFT 6-180	-12L			-L	-L						
BT50 -HFD12-135 -HFT 6-135	BT50-FSA-12S			-S	-S						
-HFD12-195 -HFT 6-195	-12L		-L	-L					-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110	
-HFD12-255 -HFT 6-255	-12XL		7906A5DB	-XL	-XL1 (※)		FHC -XL2 (※)	6005VV			
A63 -HFD12-123 -HFT 6-123	A 63-FSA-12S	ORR-40	7005ADB	FHA -S	FHC -S				HP -50A -50B -50C	FKA - 60 - 65	
-HFD12-183 -HFT 6-183	-12L			-L	-L						
-HFD12-243 -HFT 6-243	-12XL			7906A5DB	-XL		-XL1 (※)	FHC -XL2 (※)			6005VV
DN40A-HFD12-135 -HFT 6-135	DN40A-FSA-12S	ORR-40	7005ADB	FHA -S	FHC -S				HP -62A -62B -50CL	FKA-60-L -65-L	
-HFD12-195 -HFT 6-195	-12L			-L	-L						
DN50A-HFD12-135 -HFT 6-135	DN50A-FSA-12S			-S	-S						
-HFD12-195 -HFT 6-195	-12L		-L	-L					-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110	
-HFD12-255 -HFT 6-255	-12XL		7906A5DB	-XL	-XL1 (※)		FHC -XL2 (※)	6005VV			
CT40 -HFD12-135 -HFT 6-135	CT40-FSA-12S	ORR-40	7005ADB	FHA -S	FHC -S				HP -62A -62B -50CL	FKA-60-L -65-L	
-HFD12-195 -HFT 6-195	-12L			-L	-L						
CT50 -HFD12-135 -HFT 6-135	CT50-FSA-12S			-S	-S						
-HFD12-195 -HFT 6-195	-12L		-L	-L					-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110	
-HFD12-255 -HFT 6-255	-12XL		7906A5DB	-XL	-XL1 (※)		FHC -XL2 (※)	6005VV			

■ Standard Accessories ●Spanner(KS-30) ●Hexagonal wrench set(W-1550S)
●Spanner(17mm)

The tool for assembly (Option)

Wrench (For shank)



CODE

TSS-HF12

■ Note ●To be used for tightening No.10(Shank Lock Nut).


Wrench (For head)



CODE

TSH-HF12

■ Note ●To be used for tightening No.12(Cover), No.11(Fixation Nut For Angle Shaft).

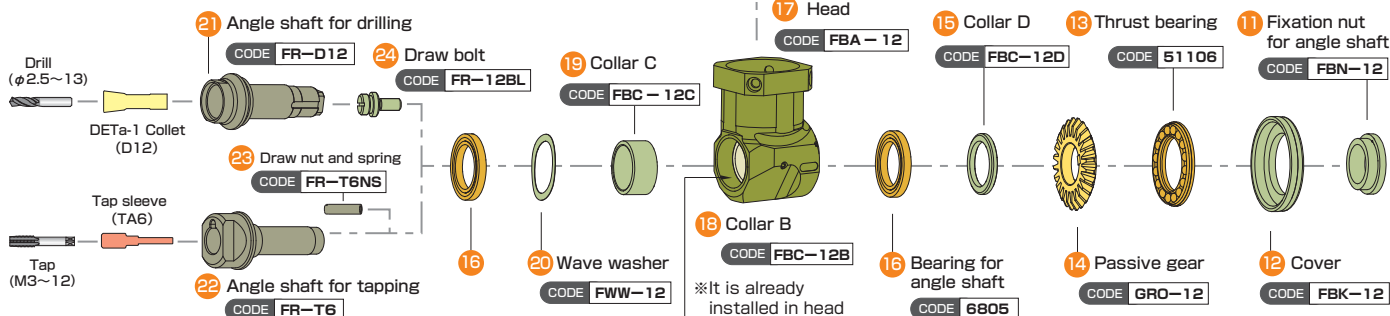

※ 3, 8, 10, 13, 16, 20, are able to use standard commercial items.

※ 23, 24 are the attachments of 21, 22.

※It is already installed in head

HFA20 / HFT12 PARTS LIST

	1 Shank	3 Needle bearing	5 Angular bearing	6 Collar A	7 Angular bearing		11 Housing	27 Positioning pin	28 Bracket
BT40 -HFA20-135	BT40-FSA-20S	—	7906A5	FHC-20S	7905A5		FHA-20S	HP-50A -50B -50C	FKB- 60 - 65
-HFT12-135	-20L			-20L			-20L		
-HFA20-195									
-HFT12-195									
BT50 -HFA20-150	BT50-FSA-20S			-20S			-20S	-62A -62B -62C -62A-20 -62B-20	FKB- 80 - 85 -110
-HFT12-150	-20L			-20L			-20L		
-HFA20-210									
-HFT12-210									
-HFA20-270	-20XL	TAF374720	7905A5DB	-20XL	—		-20XL		
-HFT12-270									
A63 -HFA20-198	A63 -FSA-20L	—	7906A5	FHC-20L	7905A5		FHA-20L	HP-50A -50B -50C	FKB- 60 - 65
-HFT12-198	-20XL	TAF374720	7905A5DB	-20XL	—		-20XL		
-HFA20-258									
-HFT12-258									
DN40A-HFA20-150	DN40A-FSA-20S	—	7906A5	FHC-20S	7905A5		FHA-20S	HP -62A -62B -50CL	FKB- 60 - 65
-HFT12-150	-20L			-20L			-20L		
-HFA20-210									
-HFT12-210									
DN50A-HFA20-150	DN50A-FSA-20S			-20S			-20S	-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HFT12-150	-20L			-20L			-20L		
-HFA20-210									
-HFT12-210									
-HFA20-270	-20XL	TAF374720	7905A5DB	-20XL	—		-20XL		
-HFT12-270									
CT40 -HFA20-150	CT40 -FSA-20S	—	7906A5	FHC-20S	7905A5		FHA-20S	HP -62A -62B -50CL	FKB- 60 - 65
-HFT12-150	-20L			-20L			-20L		
-HFA20-210									
-HFT12-210									
CT50 -HFA20-150	CT50 -FSA-20S			-20S			-20S	-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HFT12-150	-20L			-20L			-20L		
-HFA20-210									
-HFT12-210									
-HFA20-270	-20XL	TAF374720	7905A5DB	-20XL	—		-20XL		
-HFT12-270									

■ Standard Accessories ●Spanner(KS-41) ●Hexagonal wrench set(W-1550S)
●Spanner(FC-50)*Only HFA20

The tool for assembly (Option)

Wrench (For shank and head)



CODE
TS-HA20


■Note
●To be used for tightening
No.10(Shank Lock Nut), No.17
(Fixation Nut For Angle Shaft).

Assembling tool for needle bearings



CODE
TPN-HA20

■Note
●No.21 (Needle bearing)
Fixation nut for angle shaft.

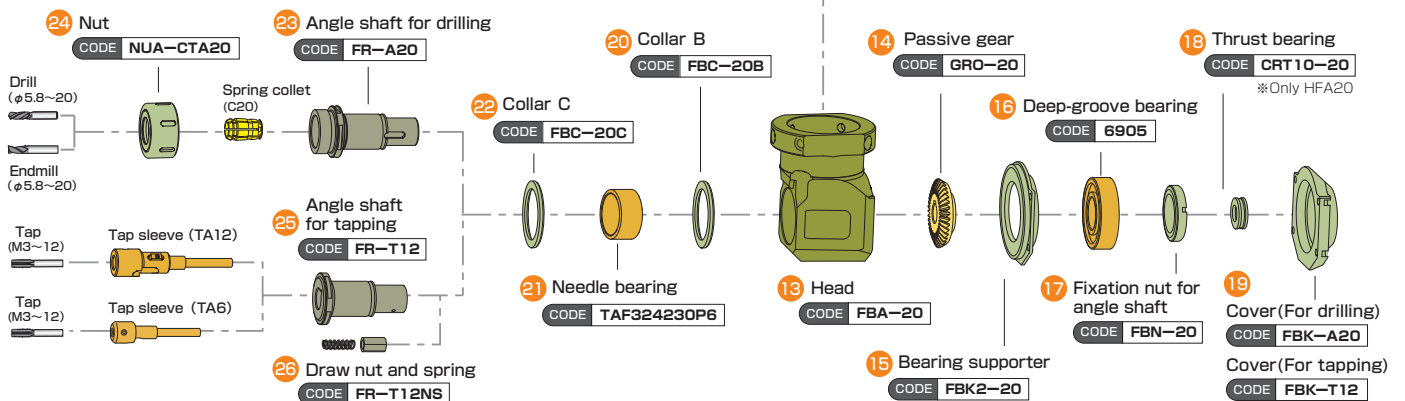

HUD7 / HUA10 / HUT4 PARTS LIST

	1 Shank	34 Positioning pin	35 Bracket
BT40 -HUD 7-135	BT40-FSA-U7	HP -50A -50B -50C	FKA- 60 - 65
-HUA10-135			
-HUT 4-135			
BT50 -HUD 7-150	BT50-FSA-U7	-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HUA10-150			
-HUT 4-150			
DN40A-HUD 7-150	DN40A-FSA-U7	HP -62A -62B -50CL	FKA- 60-L - 65-L
-HUA10-150			
-HUT 4-150			
DN50A-HUD 7-150	DN50A-FSA-U7	-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HUA10-150			
-HUT 4-150			
CT40 -HUD 7-150	CT40-FSA-U7	HP -62A -62B -50CL	FKA- 60-L - 65-L
-HUA10-150			
-HUT 4-150			
CT50 -HUD 7-150	CT50-FSA-U7	-62A -62B -62C -62A-20 -62B-20	- 80 - 85 -110
-HUA10-150			
-HUT 4-150			

■ Standard Accessories ●Spanner(KS-21) ●Hexagonal wrench set(W-1550S)
●Spanner(FC-32)*Only HUA10

The tool for assembly (Option)

Wrench (For shank)



CODE

FC-32

■Note

●To be used for tightening No.8(Shank Lock Nut).

Wrench (For hed)



CODE

TP-U7F

■Note

●No.16(Nut),No.22(Fixation nut for angle shaft) used for assembling and disassembling.

Assembling tool for needle bearings




CODE

TP-U7

■Note

●No.27(Shell-type needle bearing) used for assembling and disassembling.

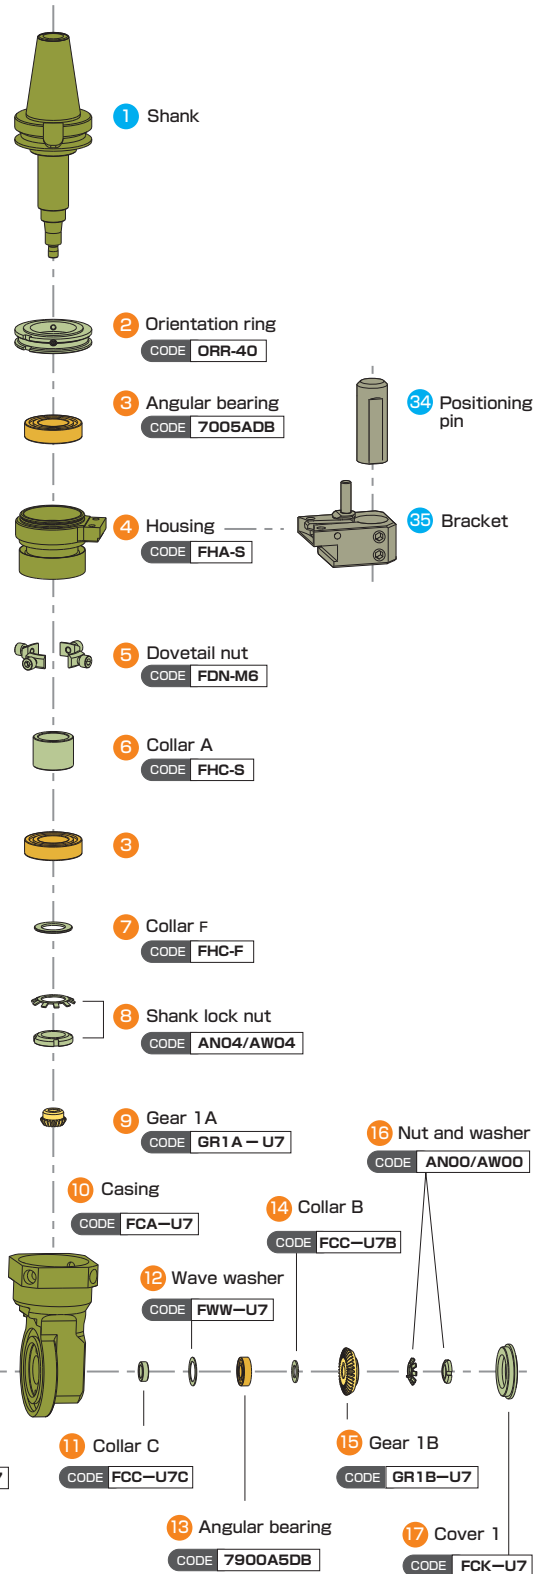


※ 3, 8, 12, 13, 16, 21, 27, are able to use standard commercial items.

※ 31~33 are the attachments of 28~30.

HUA20 / HUT6 PARTS LIST

	1 Shank	35 Positioning pin	36 Bracket
BT40-HUA20-135	BT40 -FSA-U20	HP -50A -50B -50C	FKB- 60 - 65
-HUT 6-135			
BT50-HUA20-150	BT50 -FSA-U20	-62A -62B -62C -62A-20 -62B-20	FKB- 80 - 85 -110
-HUT 6-150			
DN40A-HUA20-150	DN40A-FSA-U20	HP -62A -62B -50CL	FKB- 60 - 65
-HUT 6-150			
DN50A-HUA20-150	DN50A-FSA-U20	-62A -62B -62C -62A-20 -62B-20	FKB- 80 - 85 -110
-HUT 6-150			
CT40 -HUA20-150	CT40 -FSA-U20	HP -62A -62B -50CL	FKB- 60 - 65
-HUT 6-150			
CT50 -HUA20-150	CT50 -FSA-U20	-62A -62B -62C -62A-20 -62B-20	FKB- 80 - 85 -110
-HUT 6-150			

■ Standard Accessories ●Spanner(KS-33) ●Hexagonal wrench set(W-1560S)
●Spanner(FC-50)*Only HUA20

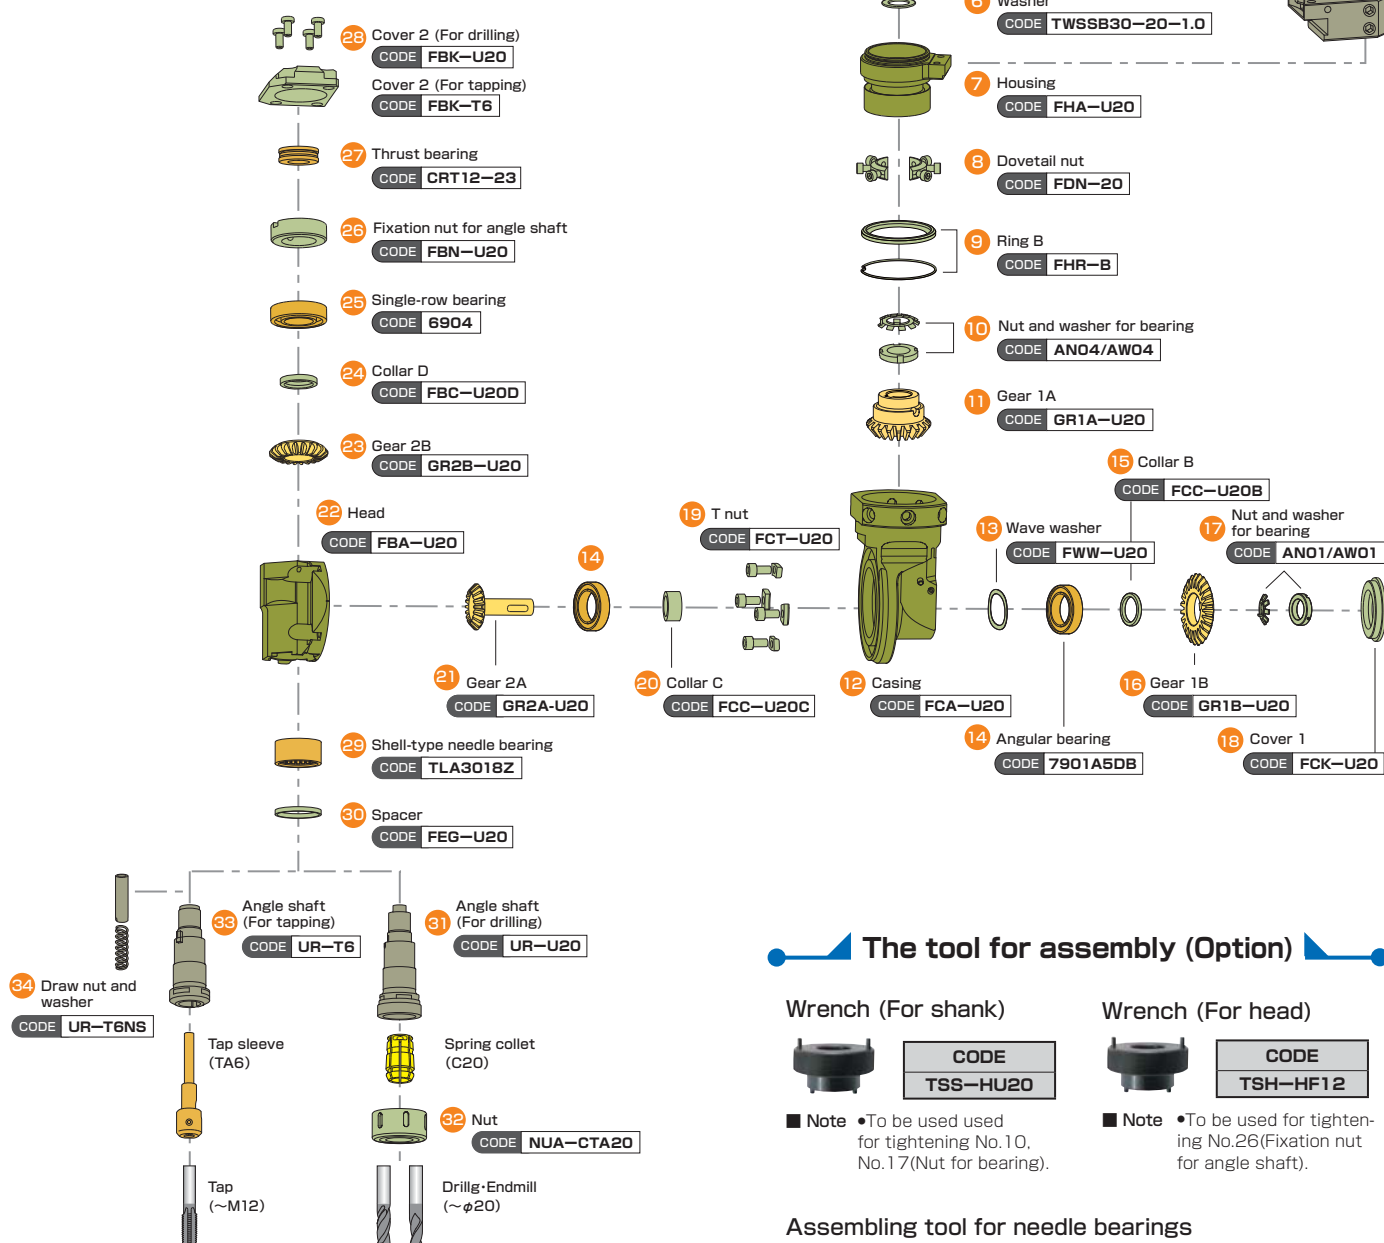

The tool for assembly (Option)

Wrench (For shank)



CODE
TSS-HU20

■ Note ●To be used for tightening No.10, No.17(Nut for bearing).

Wrench (For head)



CODE
TSH-HF12

■ Note ●To be used for tightening No.26(Fixation nut for angle shaft).

Assembling tool for needle bearings



CODE
TPN-HU20

■ Note ●No.29(Shell-type needle bearing)used for assembling and disassembling.

※ 3, 5, 10, 13, 14, 17, 25, 27, 29, are able to use standard commercial items.